

The Future of Fume Extraction



FEATURES

- · Clear & informative graphic displa
- Highest grade HE A and carbon technology
- Automatic electronic flow control maintains a constant extraction rate even as the filter blocks
- Gas and particle sensors to warn the operato
- Adjustable airflow

SPECIFICATIONS

Voltage	120v	230v
Volume Part Number	0LX2101D	0LX2100D
Vacuum Part Number	081026D	080026D
Wattage	0.5kW	0.5kW
Frequency	50Hz / 60Hz	50Hz / 60Hz
Cabinet Height	710mm	710mm
Cabinet Width	465mm	465mm
Cabinet Depth	528mm	528mm
Cabinet Weight	50kg	50kg
Sound Level	<60dBa	<60dBa
Airflow	200m3/h	200m3/h

INCLUDED AS STANDARD...

FILTERS



Main Filter Code 113505

Description HEPA/Chemical



Pre-filter Code 200025

Description F5 Pad

CONNECTION KIT

Connection kit is included see overleaf for options

OPTIONS

Main Filter Code: Description: 113505H HEPA/Chemical (Hydrophobic) 113579 HEPA/Twin Chemical 113668 HEPA/Twin Chemical 113512 HEPA/Chemical (Cleanroom) 113669 HEPA/Chemical (Cleanroom) 113508 Chemical 113809 **HEPA** 113513 Solvent Lock

Connection Kits

Main FilterCode:Description:113662Chemical Special113505PChemical Special

113505P Chemical Spec 113531 Pleated Bag

Pre-filter


Code: Description: 200524 F8/F9 Pad


valve


6.0m



Purex Inlet

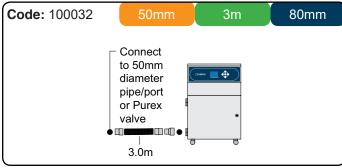

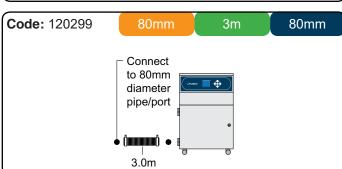

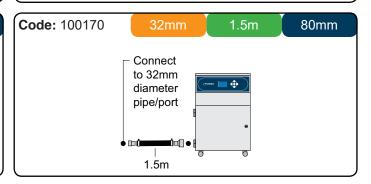

Soldering Tip Kits (optional extra) 200 can have up to 30 tips!





- 1 x 1.5m x 6mmID x 1.5mm wall clear silicone hose
- 1 x screw in adaptor (8mm hose, M10)
- 5 x 8mm Ø hose clips
- 1 x universal iron stand
- 1 x soldering iron stand 1 x cup standard iron
- 1 x cup metcal iron
- 1 x extraction tube clip weller
- 1 x ectraction tube clip metcal/mini weller
- 1 x extraction tube strap universal
- 1 x 6mm Ø x 100mm extraction tube weller
- 1 x 6mm Ø x 135mm extraction tube metcal
- 1 x 6mm Ø x 225 extraction tube universal

If you do not see a connection kit or soldering tip kit that fits your machine or pipework, please contact Purex or your representative

Interfacing



Interfacing can remotely start the Purex machine when the connected machine starts.

Interfacing can also warn the connected machine when the Purex machine is in alarm.

Take a look through our Interfacing Guide to see our extensive range of options



Purex Inc 2246 Palmer Drive, Suite 108 Schaumberg Illinois 60173 USA